


8 BIT POCKET GAME

(8/16BIT CLASSIC GAMES)

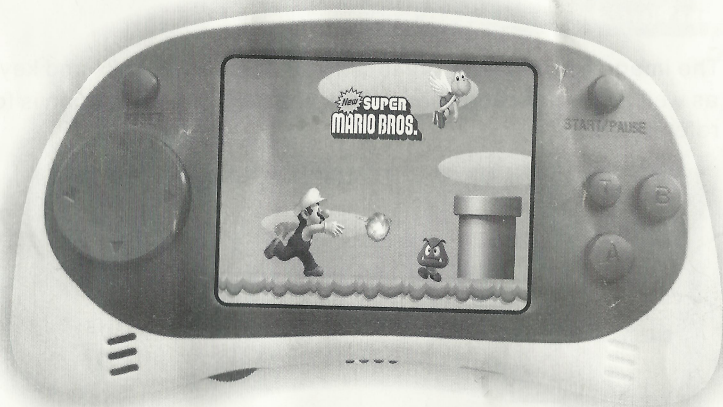

ITEM NO:RS-8

INSTRUCTION MANUAL


THANK YOU

Thanks for purchasing RS play vision portable. RS play vision portable product designed for many hours of game-playing fun. This product is small and portable, so you can take it anywhere!

Please read the following contents prior to connecting and playing to ensure proper use and care.

Game Player Appearance And Key List

The image below shows the location of the output jacks and keys, as well as the function of each jack and key. (the illustration is for reference only)

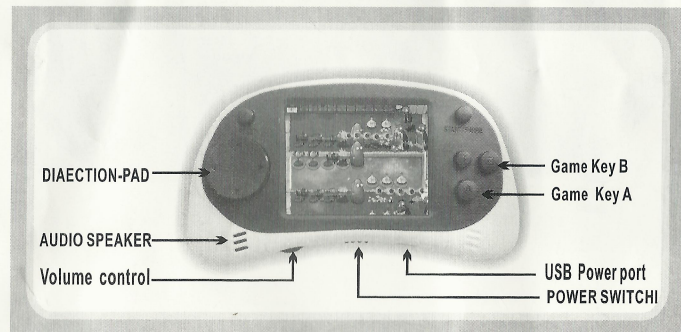

1 POWER ON/OFF

Power On/off The Player

2 RESET

Player's Operation Menu

3 DIRECTIONAL

Pad (d-pad) Directional Pad For Game Playing

4 SPEAKER

The Audio Speaker

5 START/PAUSE

Push to start the Game And Push Again To Pause

6 T KEY

A KEY TURBO

7 B KEY

Game Key B

8 A KEY

Game Key A

9 VOLUME CONTROL

Rotate Dial To The Up/down To Increase/decrease Volume

10 USB POWER PORT:


Power supply and charger

11 AV OUTPUT PORT:

TV VIDEO DISPLAY OUT

How Do You Play The Game?

- Slide the "ON/OFF" key to "ON" turn on the game player. Slide the "ON/OFF" key to "OFF" to turn off the game player.
- Press "UP" or "DOWN" on the D-pad to select one of your favorite games, then press the "START/PAUSE" or "A" key to enter the selected game.
- Press the "START/PAUSE" key to start the game.
- Starting the game use the key A B and T to play the games.

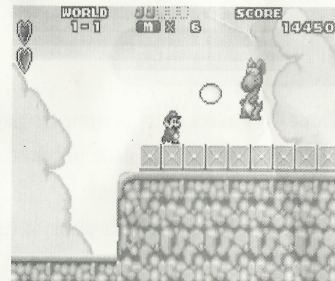

How Do You Back To Game?

Press "RESET" key, and the screen will go back to the game menu page.

turn off the game player?

Slide the "ON/OFF" key to "OFF" to turn off the game player.

RESET FUNCTION

Whenever press the Reset button, it will return to the selection screen. If the game crash, please press the Reset button to restart.

VOLUME CONTROL

Turn the Volume Control at the side of the unit to increase/decrease the volume.

3. Not And

- 1) When the pictures are abnormal, please change the batteries at time
- 2) Installing the battery, the battery positive and negative polarity is correct
- 3) Please use alkaline batteries for ensuring the function of the play
- 4) DO not dispose batteries at will, protect the environment
- 5) Please play the game under bright enough environment, and take a rest any time you feel tired

4. Maintenance and repairing

- 1) Please don't unhook or try to repair the player
- 2) Please don't expose the player to damp or sunny environment
- 3) Avoid crashing, dropping or misuse
- 4) Please don't drop liquid on the player or its accessories, and make sure the player are dry when you are cleaning
- 5) Please protect the screen from damage or dirty. Please use soft cloth to clean the screen
- 6) Do not plug in and cut off power repeatedly and quickly, or you are shortening the life of battery

5. Batteries safety instructions

- 1) Put in batteries according to the polarity
- 2) Do not recharge non-rechargeable batteries
- 3) When recharge rechargeable batteries, please don't do that without the company of adults
- 4) Please don't mix with different types, size or old batteries
- 5) Please take the batteries out when it is not played for a long time
- 6) Please take out the batteries out of power
- 7) Rechargeable batteries must be removed from the device before recharging
- 8) The machine without charge function